



## Cisco 7841: Change Your Ringtone

Stephanie Obodda - 2026-02-19 - Comments (0) - Cisco 7841

To change the Ringtone:

1. Press the “Applications” key.
2. Use the Navigation Key to scroll and select Preferences, and then Ringtone. Note: the current selected ringtone name will be highlighted and checked.
3. Use the Navigation key again to scroll through the list of ring types, and press the “Play” soft key to hear a sample of the selected ring type.
4. When you find the desired ring, press the “Set” softkey.
5. Then press the “Apply” soft key to confirm your selection. Your selection will be checked.
6. Press the back arrow to return to the Preferences Screen and then “Exit”.

### Related Content

- [7841 Phone Quick Start Guide](#)
- [Cisco 7841: Conference](#)
- [Cisco 7841: View and Clear Call History](#)