

## IT Service Center Loaner Equipment: Zoom H1

James Foley - 2019-08-20 - Comments (0) - Loaner Equipment

### Supplied Equipment

- (1) One Zoom H1 Handy Recorder
- (1) One USB Cable
- (1) Micro SD Card


### Part Name and Functions

#### *Front View*



- 1 -- **Stereo Microphone:** Record sound in stereo in a 90 degree field in front of the recorder
- 2 -- **Recording/Peak Indicator:** This lights during recording and blinks rapidly if the input signal is too loud (peak detection)
- 3 -- **Record Button:** Use to start and stop recording and to confirm prompts such as file deletion, for example.

## Side View

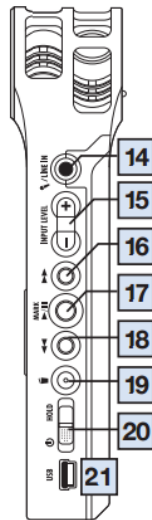

14	Mic/line input jack	Connect and record another device or microphone here. Mics that require plug-in power can be used with this jack.
15	Input level buttons	Use to adjust the recording level manually.
16	Fast forward button	During playback, use to select files and to fast forward. On the home screen, use to set the recording format.
17	Play button	Use to start and stop file playback. On the home screen, use to add track marks.
18	Fast reverse button	During playback, use to select files and fast reverse. On the home screen, use to set the recording format.
19	Delete button	Use to erase files that are not needed.
20	Power button	Turn the power ON/OFF. Set to HOLD to disable other keys.
21	USB jack	Connect to a computer to power the unit by USB or to transfer files between the computer and the card in the unit.

## Preparing to record

### *LO CUT Filter*

The **LO CUT filter** switch is found on the back of the recorder, and this function is used for noise reduction. When **ON**, the sound of the wind and other noise can be reduced.

### *Input Level*

Use the +/- **INPUT LEVEL** buttons on the right side of the recorder to adjust the level of the input signal. For automatic adjustment, set the **AUTO level** switch on the back of the recorder to ON.

## Recording Format and Bitrate

Set the Recording Format switch on the back of the recorder to WAV. Use the fast forward >> and rewind << buttons on the right side of the recorder to set the bitrate. For podcasts and other audio-only recording, we recommend the sampling rate be set to 44 kHz, and you can choose between a bit depth of 16 and 24.

You can find a picture of these settings below:



## How to record

You can start recording from the home screen by pressing the **Record Button** on the front of the recorder. Press this button again to stop recording and return to the home screen.

The H1's built-in [X/Y microphone](#) provides two matched unidirectional microphones set at a 90 degree angle relative to one another, optimum for most stereo recording applications.

Note: If no microSD card is in the unit, you can get one from the IT Service Center Desk.

## How to play audio back

To play back recorded audio, press the play/pause button on the right side of the recorder. Playback automatically stops after all the files have been played. Press the Record Button to return to the home screen.

## How to transfer audio to a computer

Connect the recorder to the computer using the supplied USB cable. The recorder will turn on and after about 5 seconds, the word **USB** will show on the screen. After that, the recorder should appear on your computer the same as a USB flash drive. If you are using an audio editing software, you should be able to directly import from the recorder using the software's "import" functionality; otherwise, drag and drop the files to the desired location on the computer.

### Related Content

- [IT Service Center Loaner Equipment](#)
- [IT Service Center Loaner Equipment: ZOOM H1n Handy Recorder](#)